

- The barbecue shall be heated up and the fuel kept red hot for at least 30 min prior to the first cooking.
- Do not cook before the fuel has a coating of ash.

- WARNING! This barbecue will become very hot, do not move it during operation.
- Do not use indoors!
- WARNING! Do not use spirit or petrol for lighting or re-lighting!
- WARNING! Keep children and pets away.

 
 
 



HOWARM


BBQ GRILL

/ MODEL: 4528C


USER MANUAL

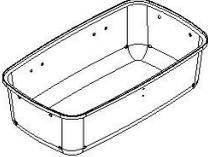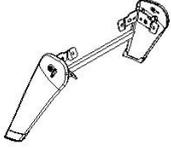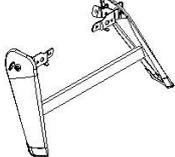

1		1PC	8		1PC
2		1PC	9		1PC
3		1PC	10		1PC
4		1PC	11		1PC
5		2PCS	12		1PC
6		2PCS	13		1PC
7		2PCS	14		1PC

 A	M4x10 	2PCS	D	M5x12 	2PCS
B	M5x12 	17PCS	E		2PCS
C	M5 	6PCS	F		2PCS


STEP1:

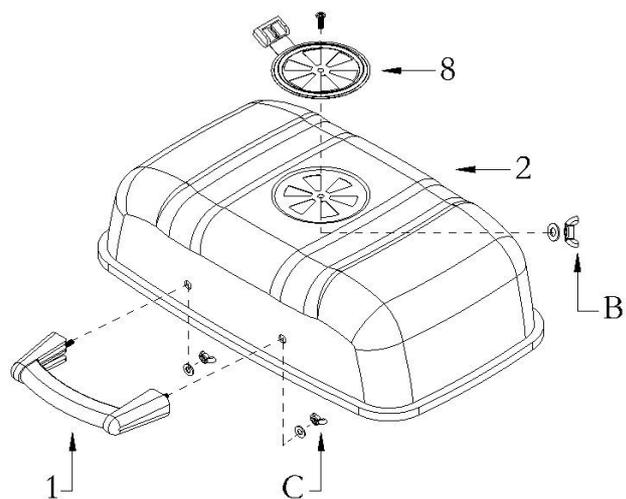

B: M5x12 0-0 1Pc


C: M5 0 2Pcs

STEP2:

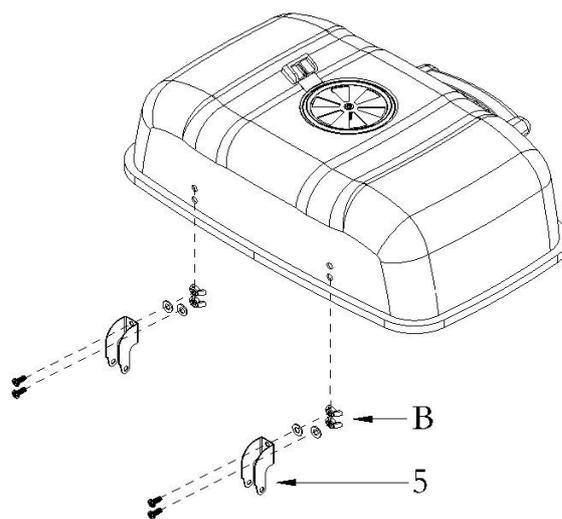


B: M5x12 0-0 4Pcs

STEP3:

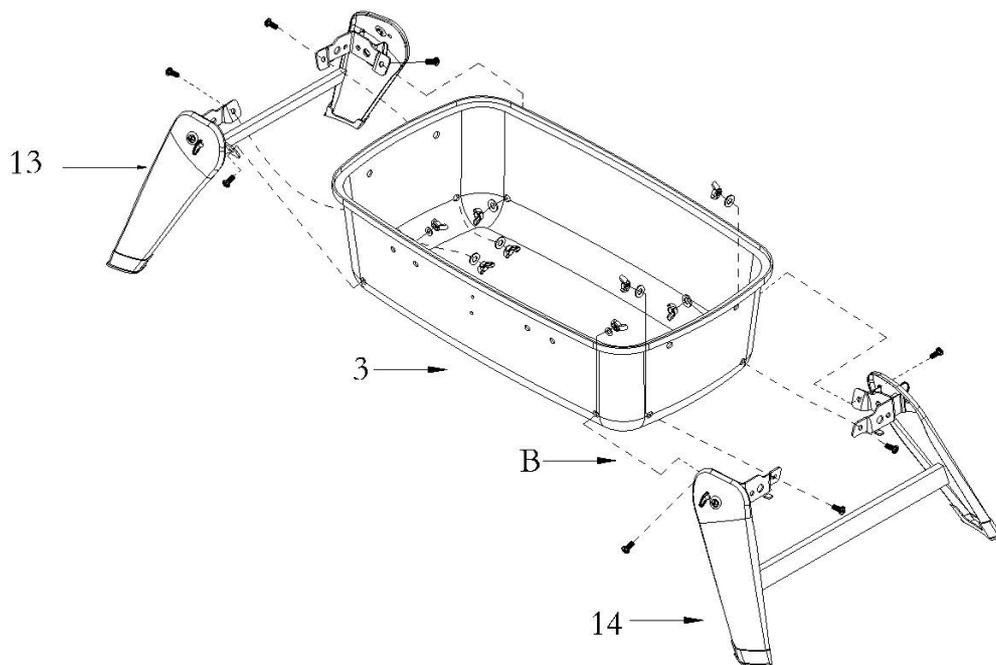


B: M5x12 0-0 8Pcs

STEP4:

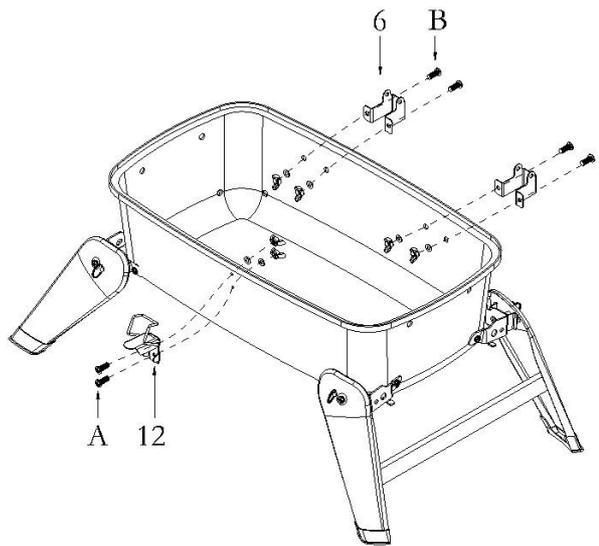


- A: M4x10 2Pcs
- B: M5x12 4Pcs

STEP5:

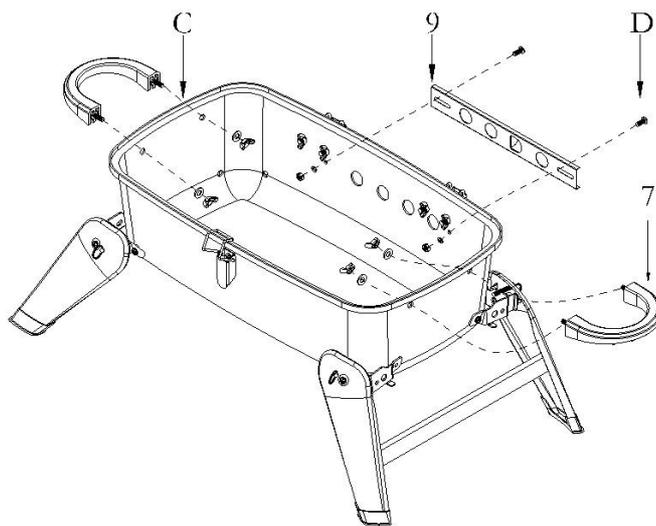


- C: M5 4Pcs
- D: M4x10 2Pcs

STEP6:

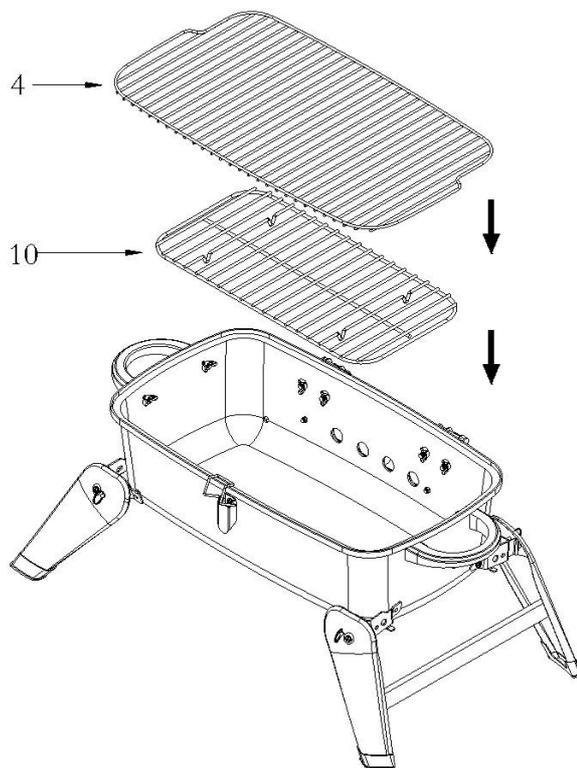


STEP7:

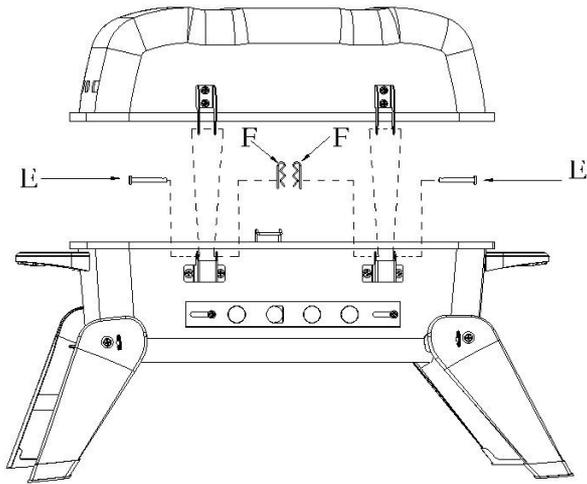

- E:  2Pcs
- F:  2Pcs

STEP8:

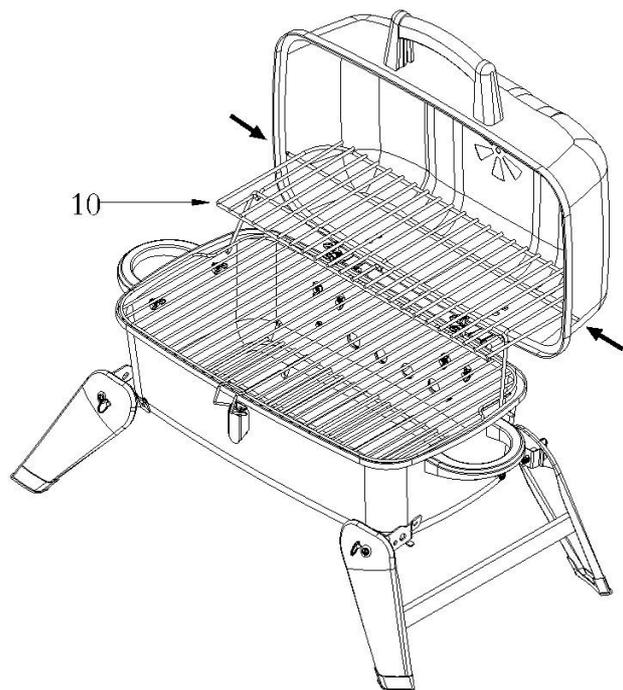

HOWARM

You've reached the end of the guide. With proper use and regular care, the product will continue to deliver reliable performance and comfort for years to come. If you ever need assistance, our support team is always ready.
